

ty. Uncompromised.

 
ROTEL®

STEREO INTEGRATED AMPLIFIER

RA-400

owner's manual

BEDIENUNGSANLEITUNG
MANUEL DE L'UTILISATEUR
GEBRUIKSAANWIJZING
MANUAL DEL USUARIO
MANUALE DELLE ISTRUZIONI
BRUKSANVISNING

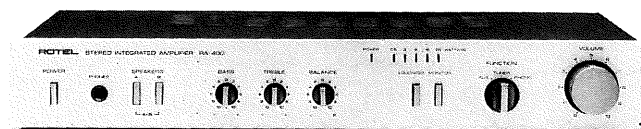

ENGLISH	2
DEUTSCH	5
FRANÇAIS	8
NEDERLANDS	11
ESPAÑOL	14
ITALIANO	17
SVENSKA	20

WARNING

TO PREVENT FIRE OR SHOCK HAZARD,
DO NOT EXPOSE THIS APPLIANCE TO
RAIN OR MOISTURE

Write your SERIAL NUMBER here.
The number is located near the name
plate on the rear panel.

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

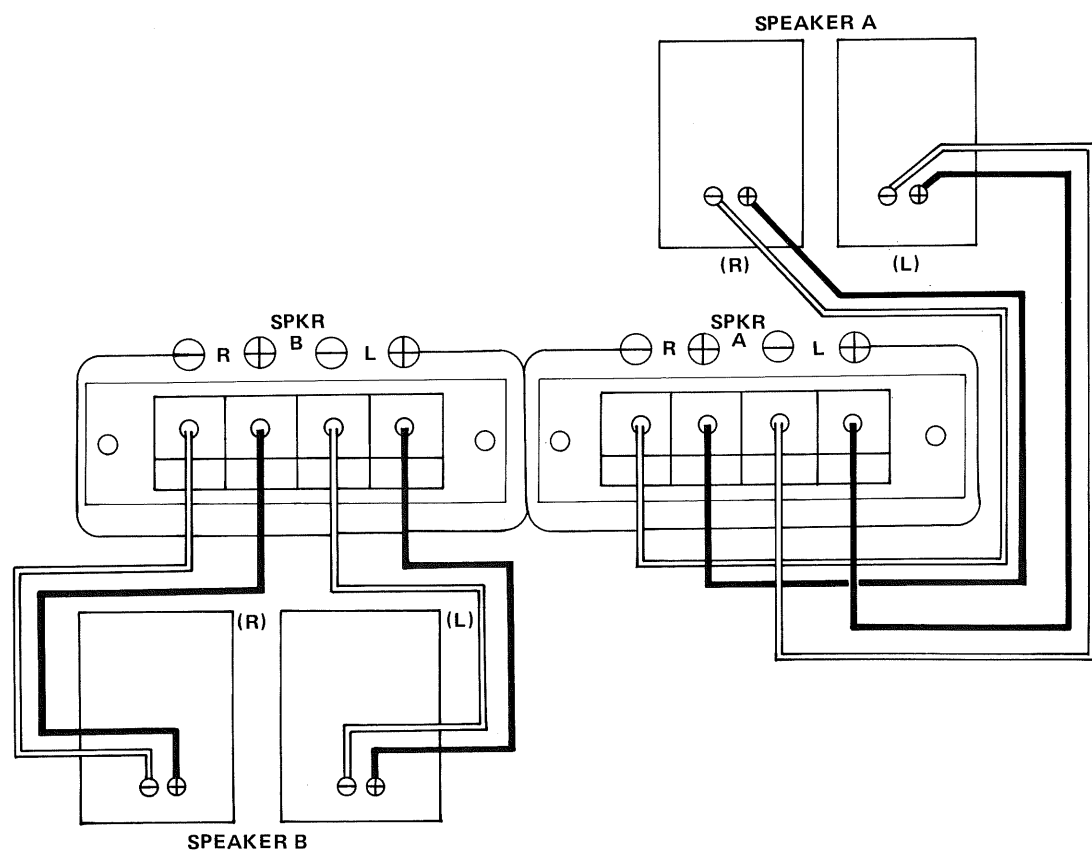

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

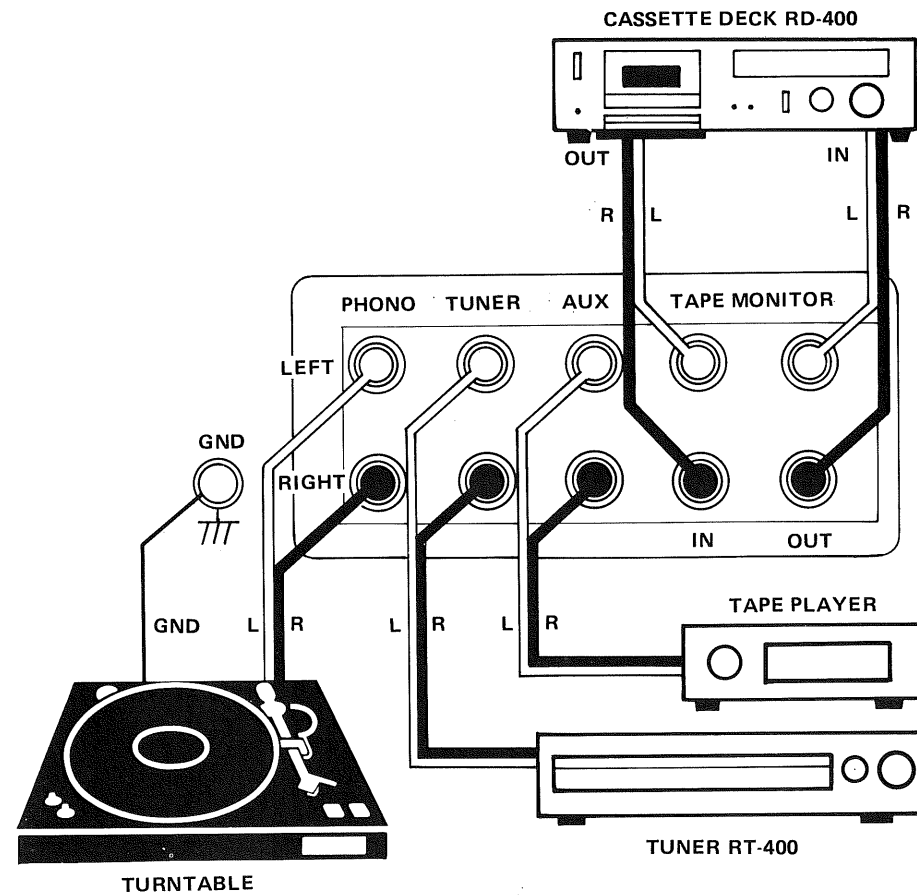

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/ TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

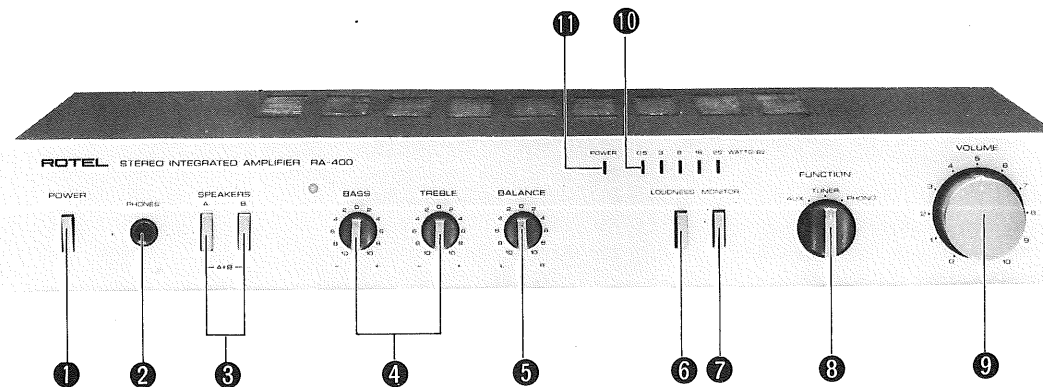

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

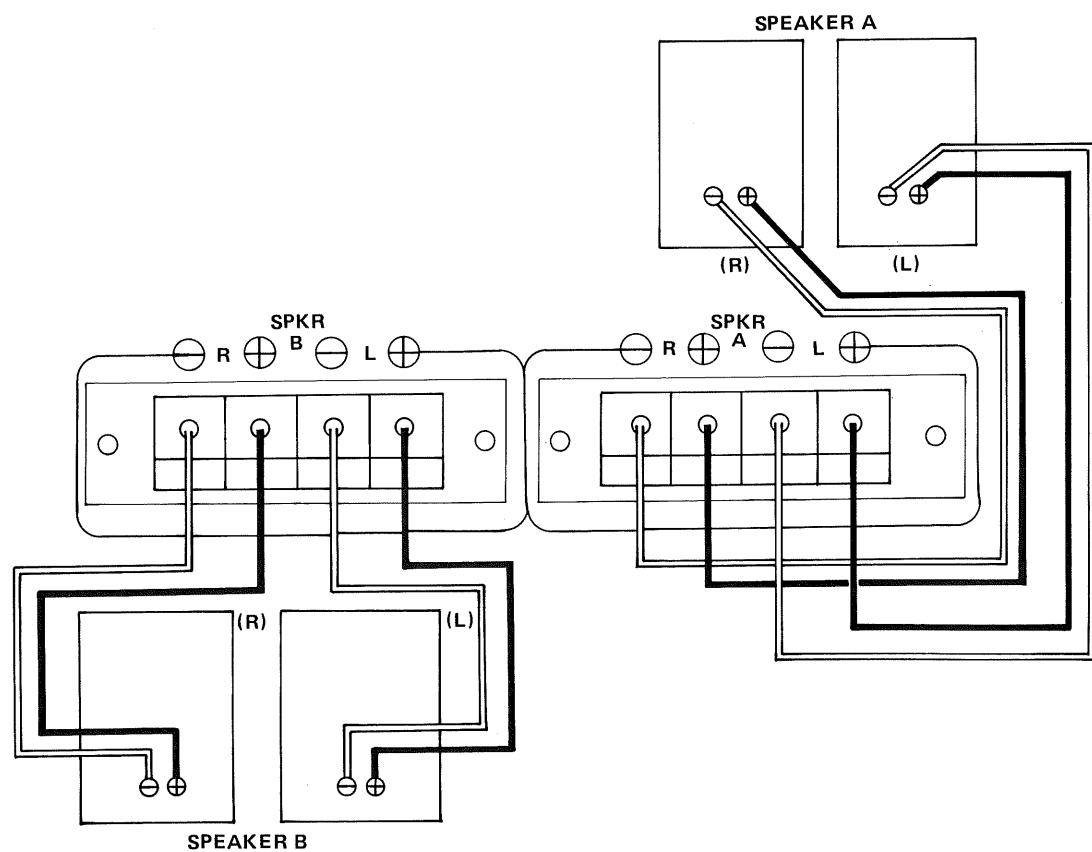

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

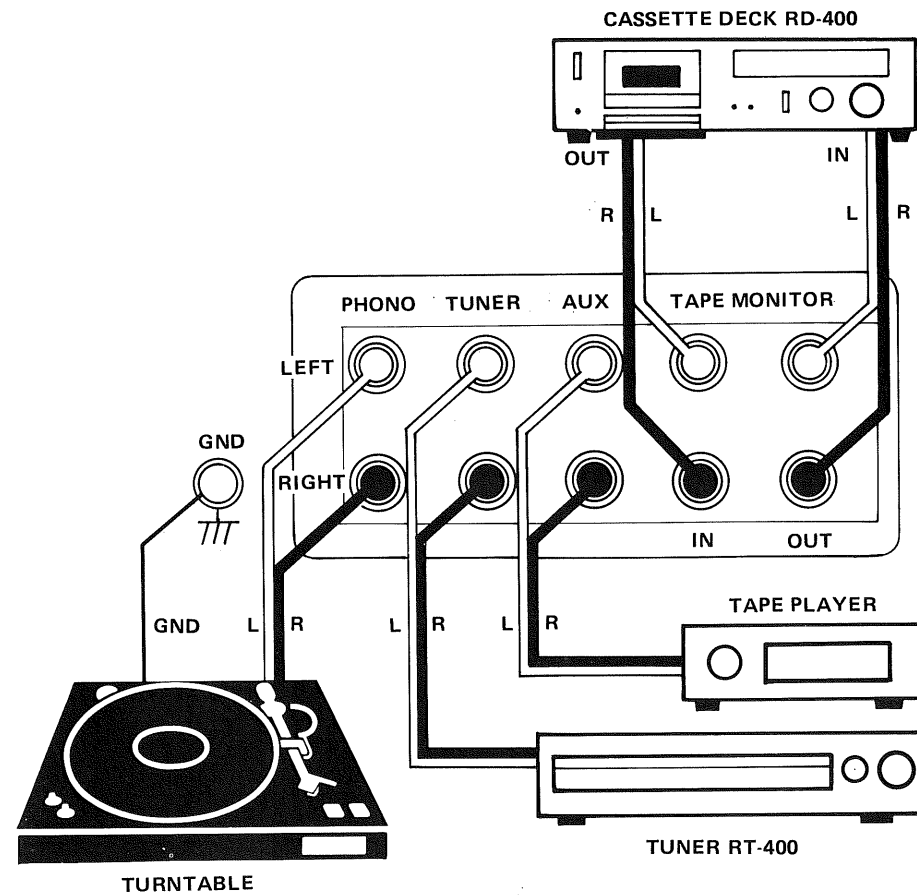

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

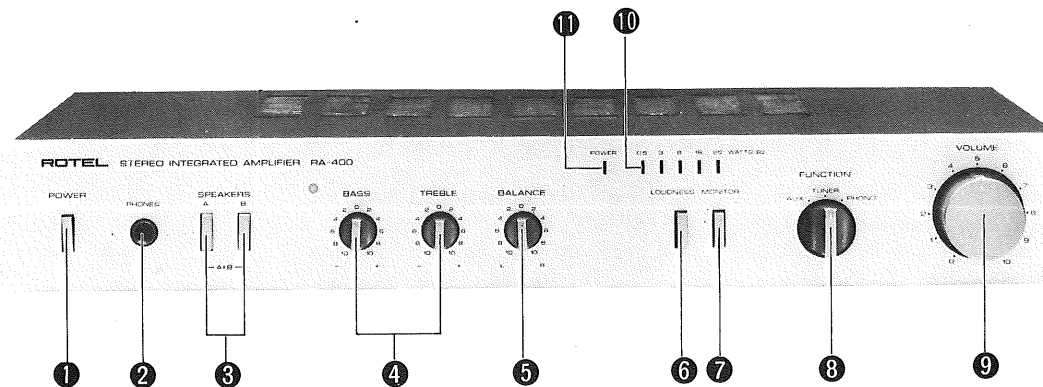

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

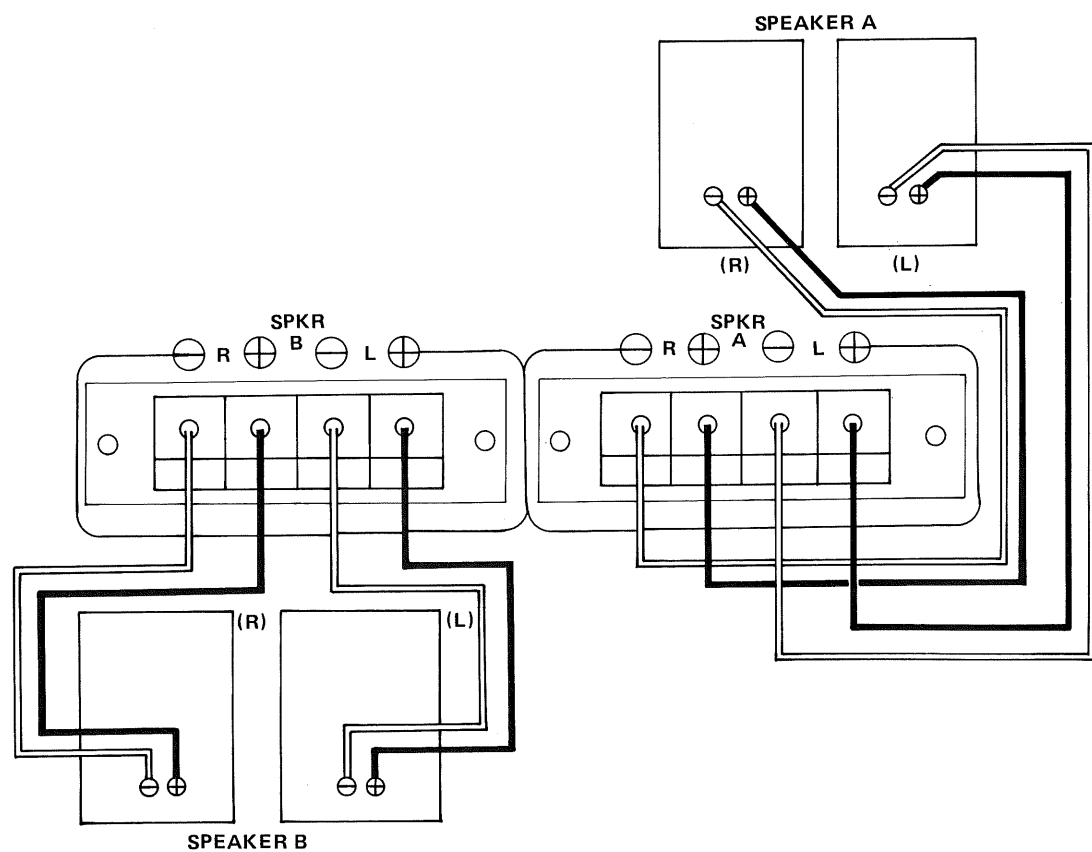

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

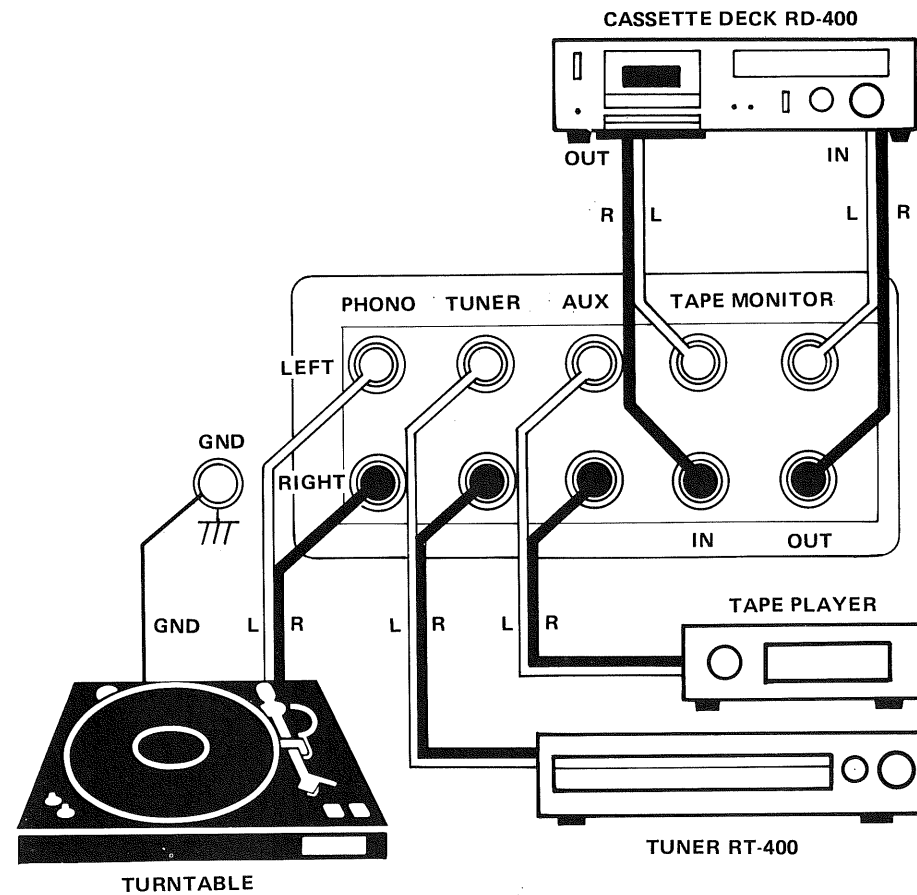

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/ TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

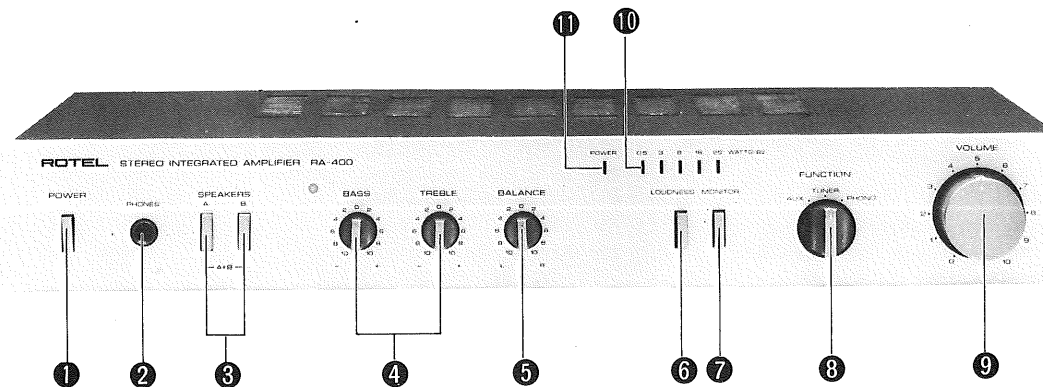

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

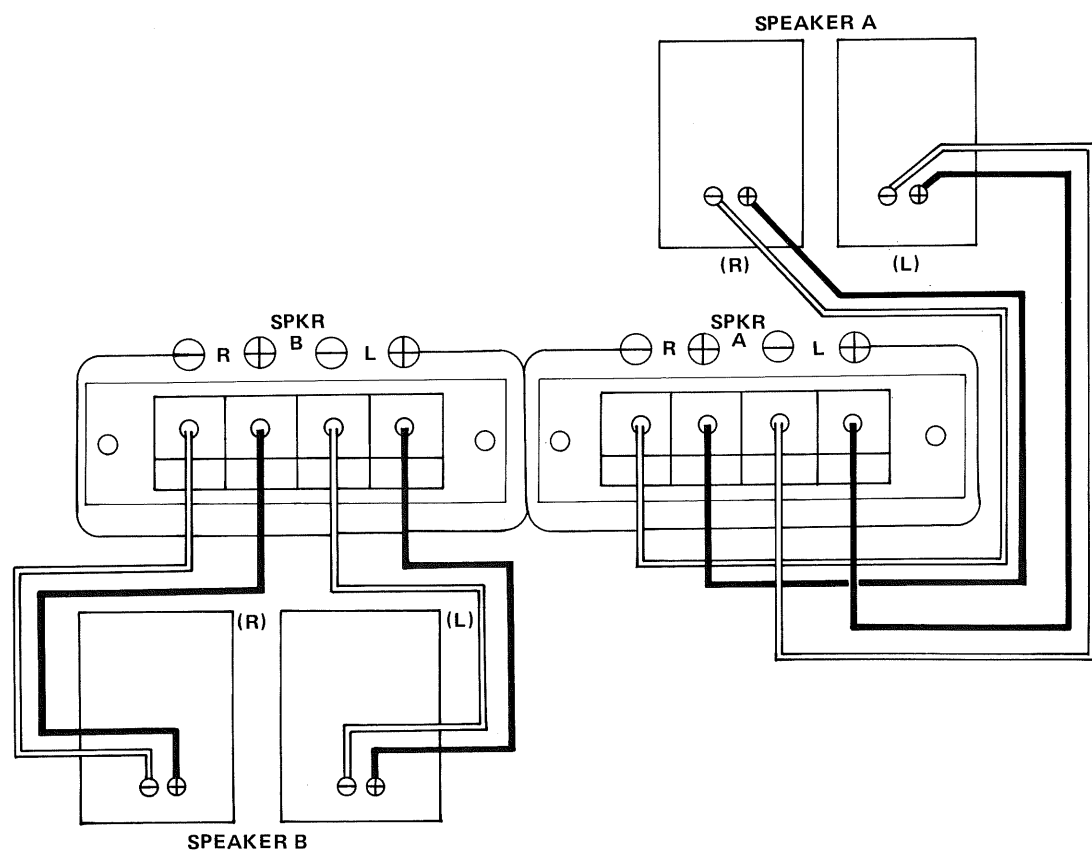

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

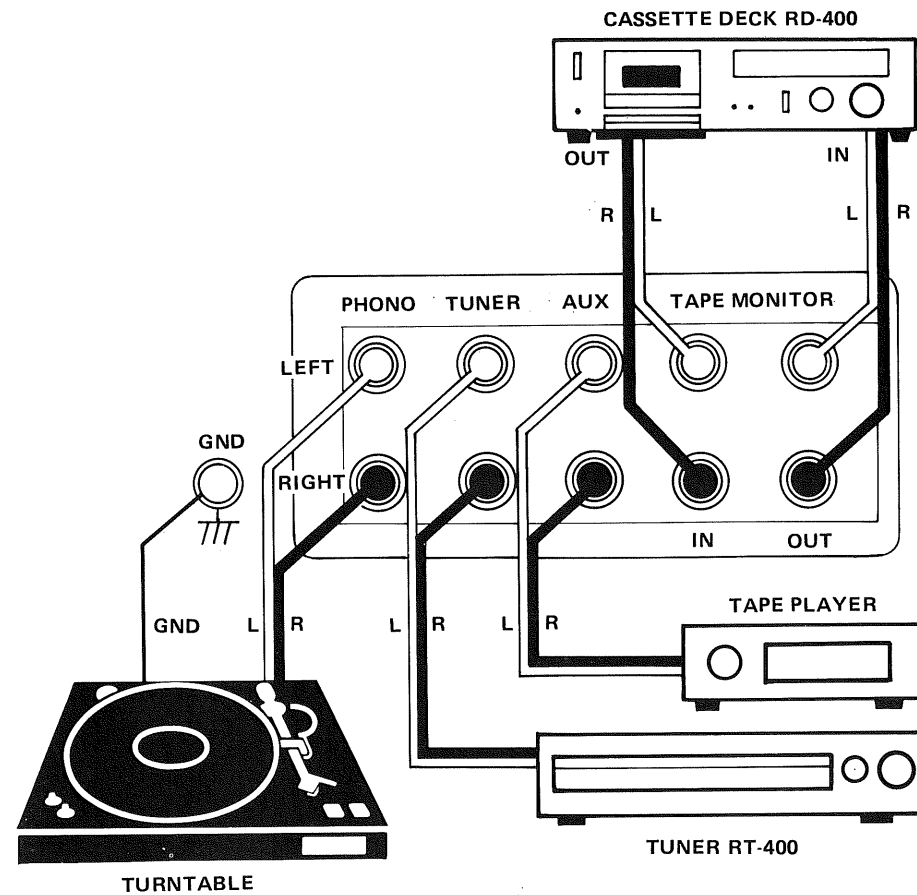

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/ TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

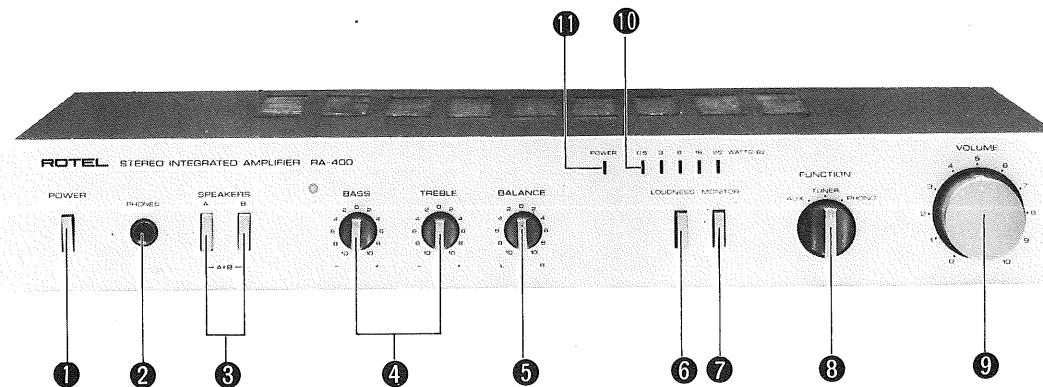

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

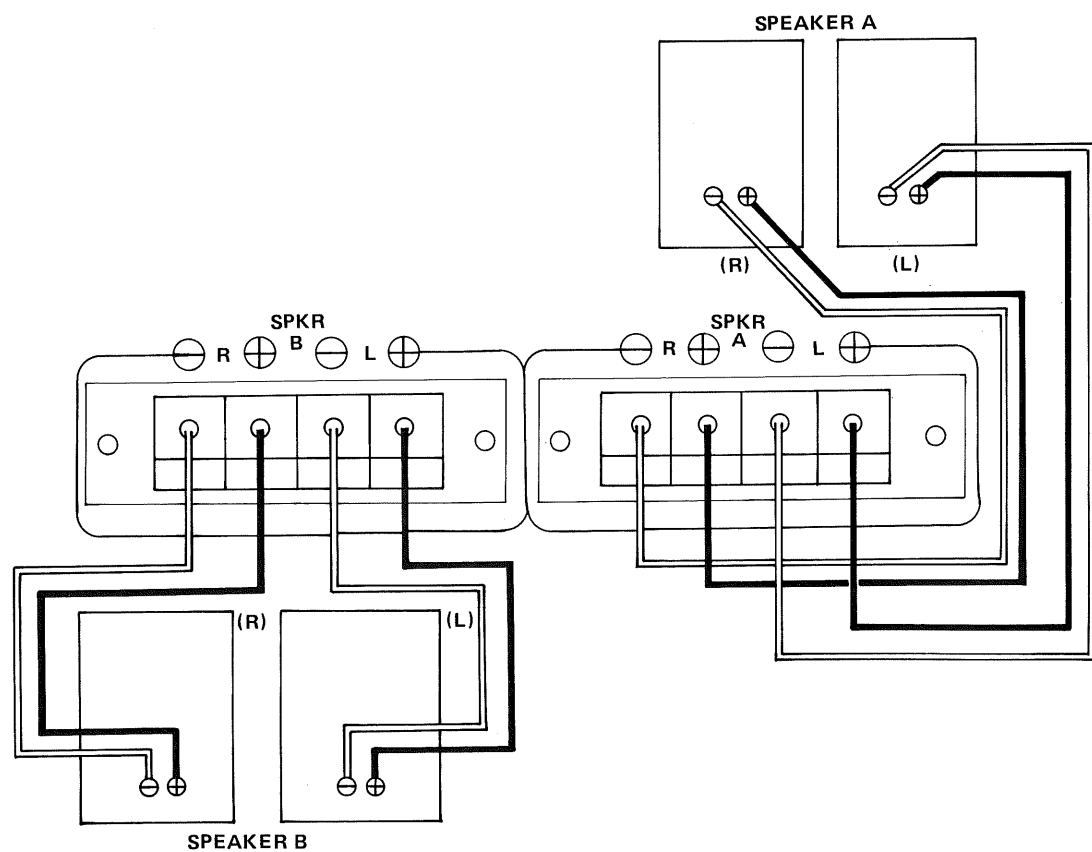

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

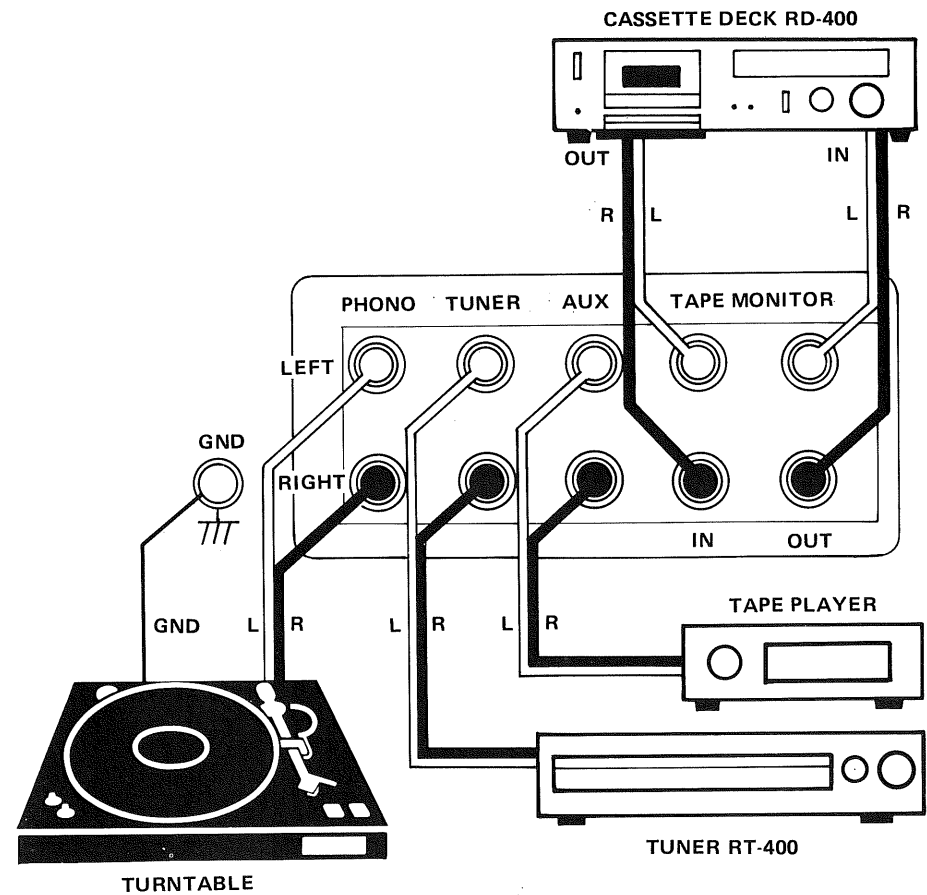

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

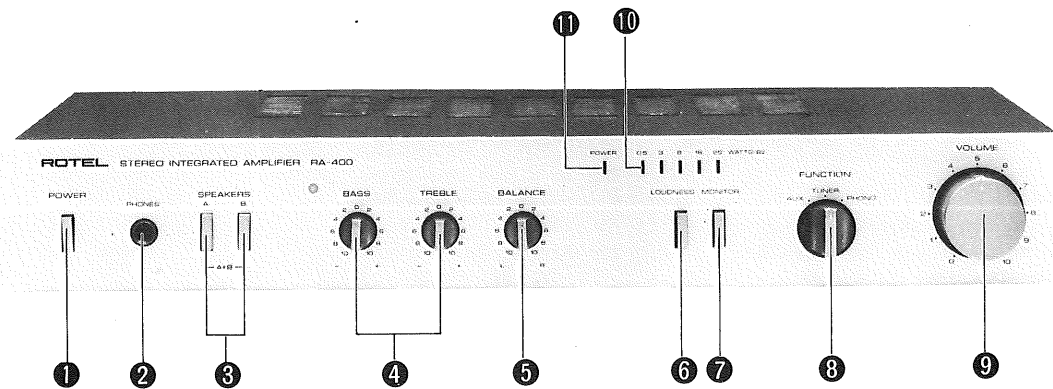

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

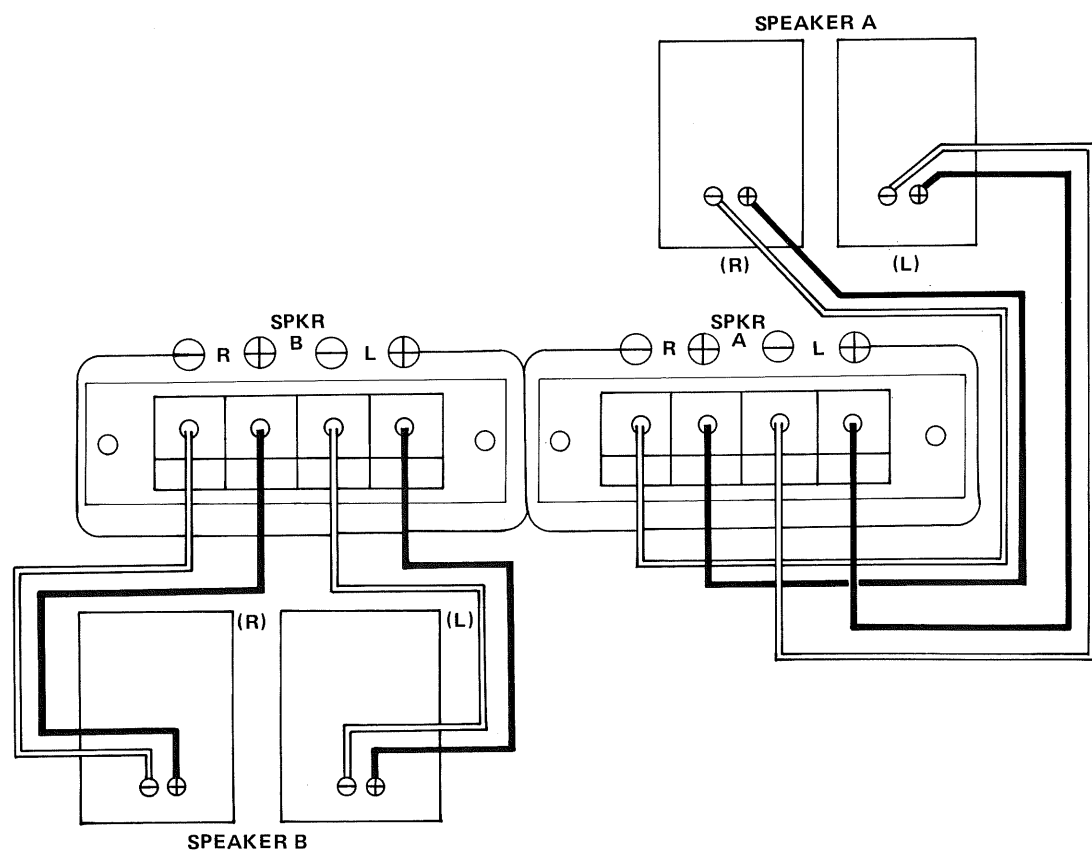

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

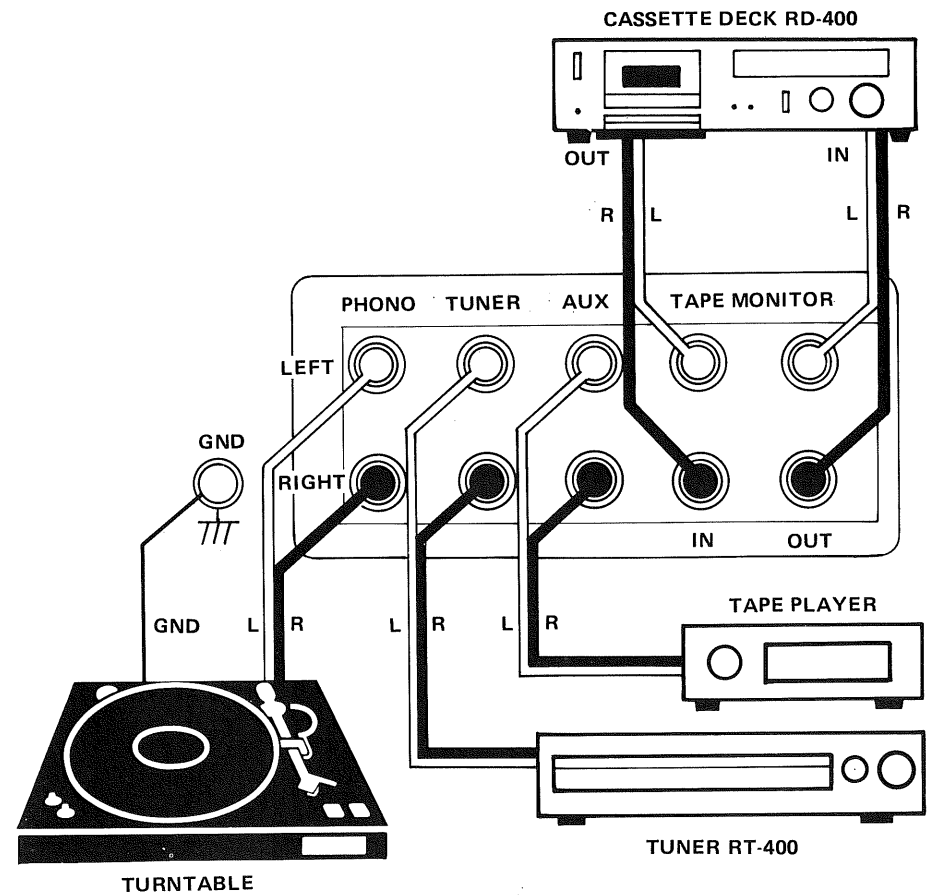

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

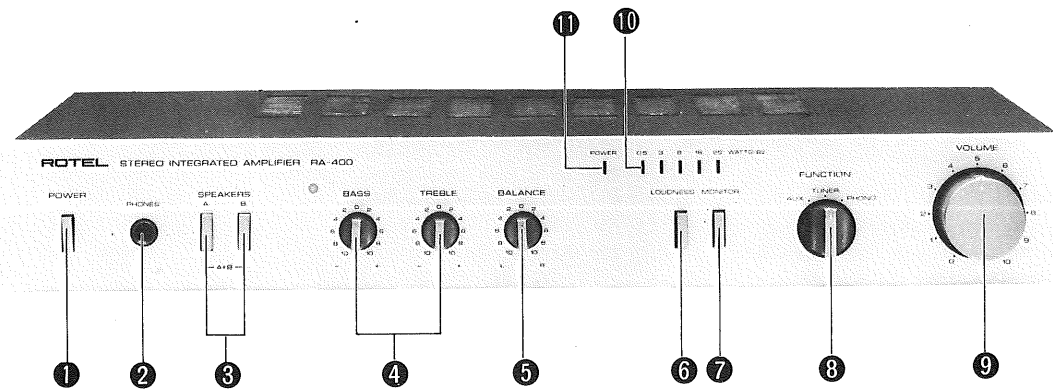

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

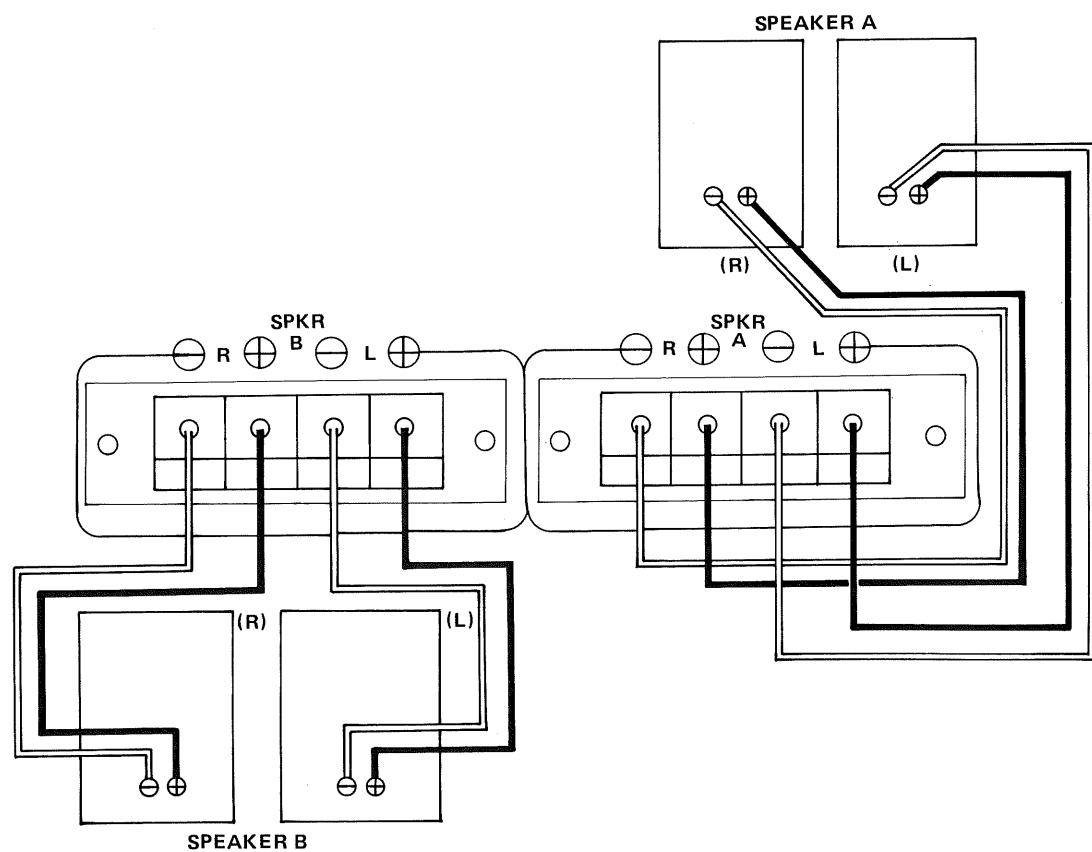

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

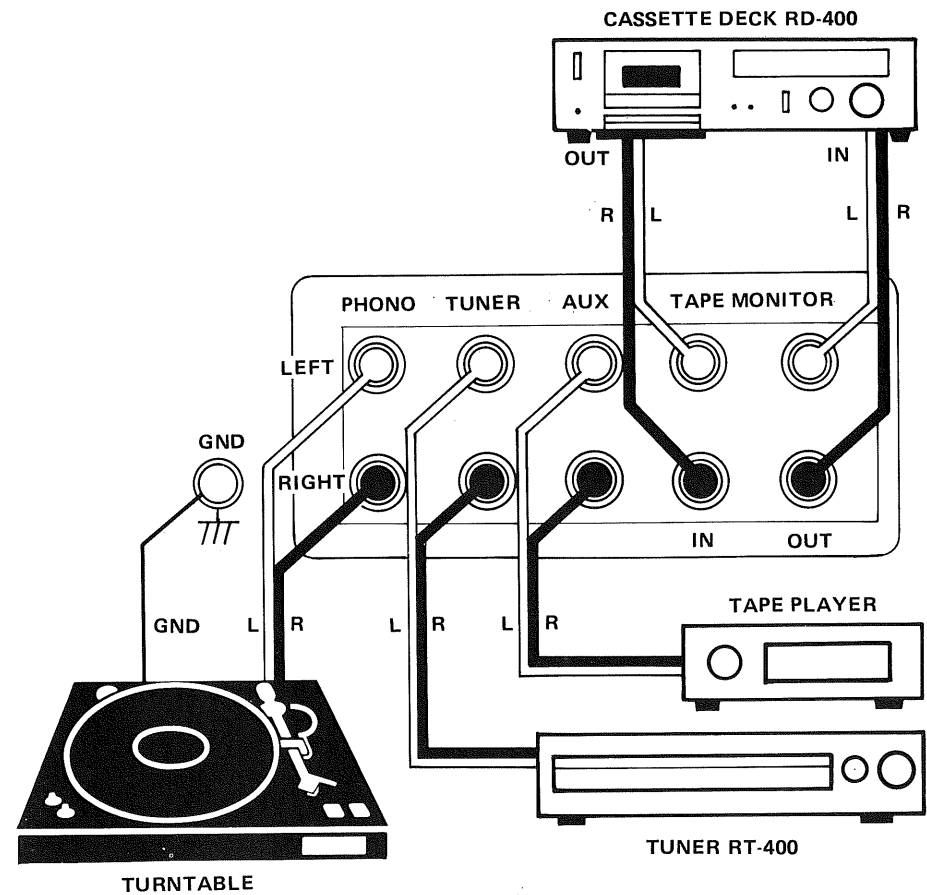

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

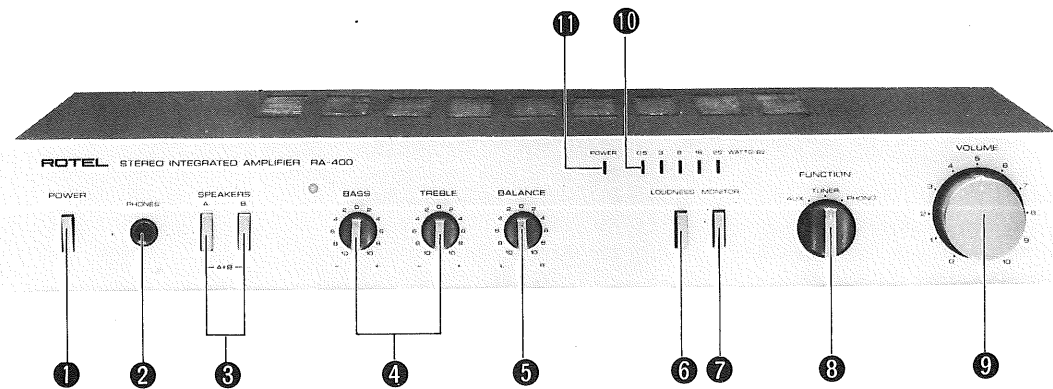

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

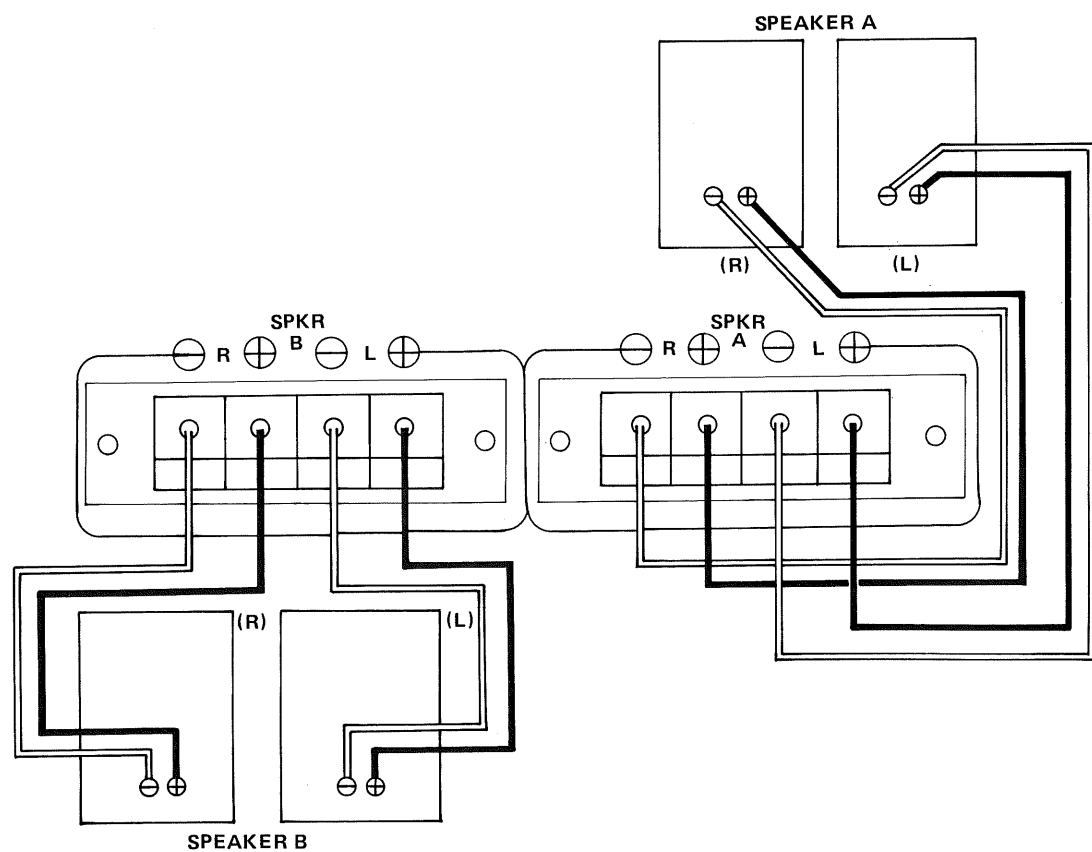

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

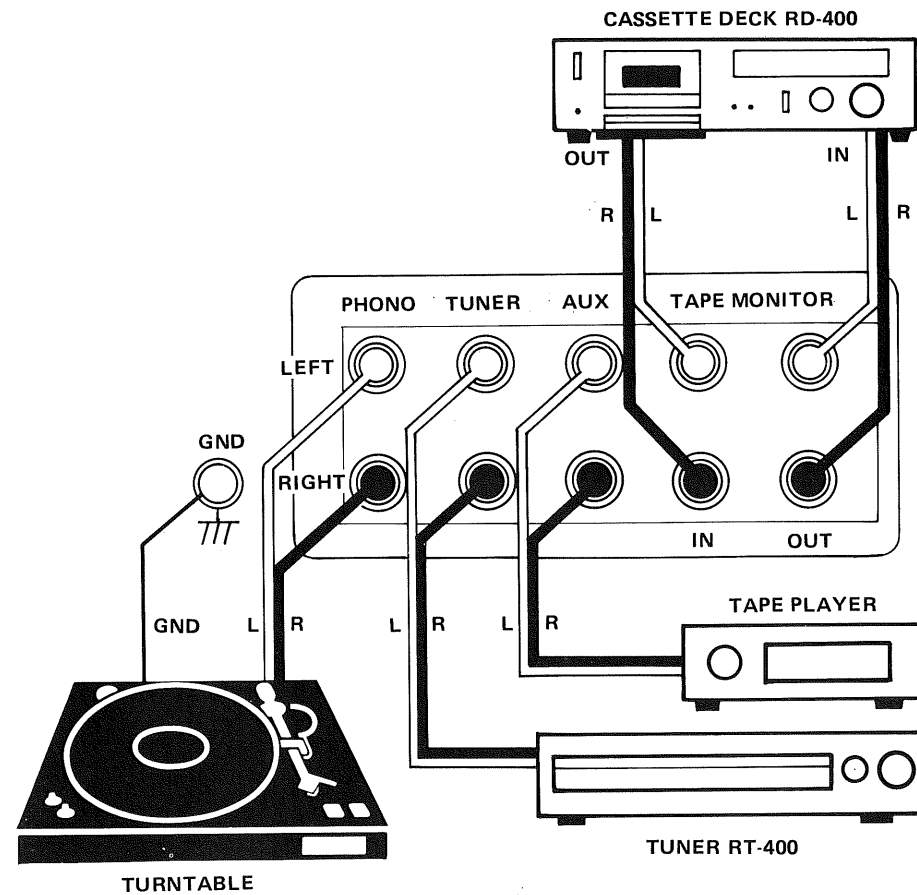

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

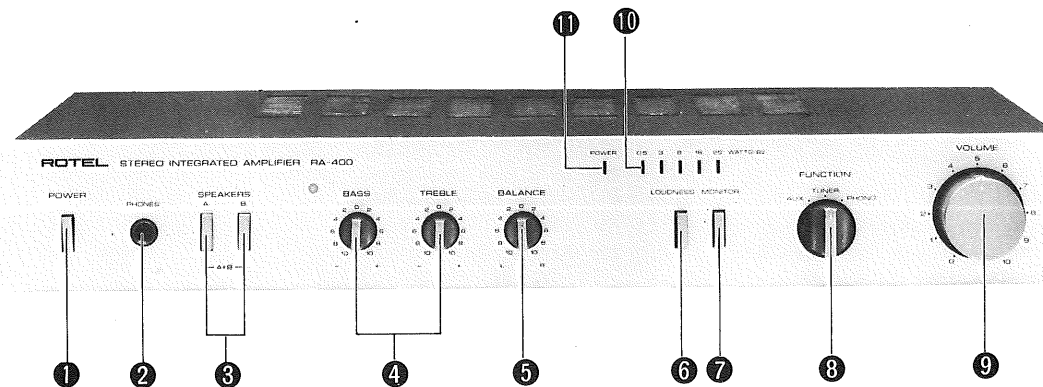

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

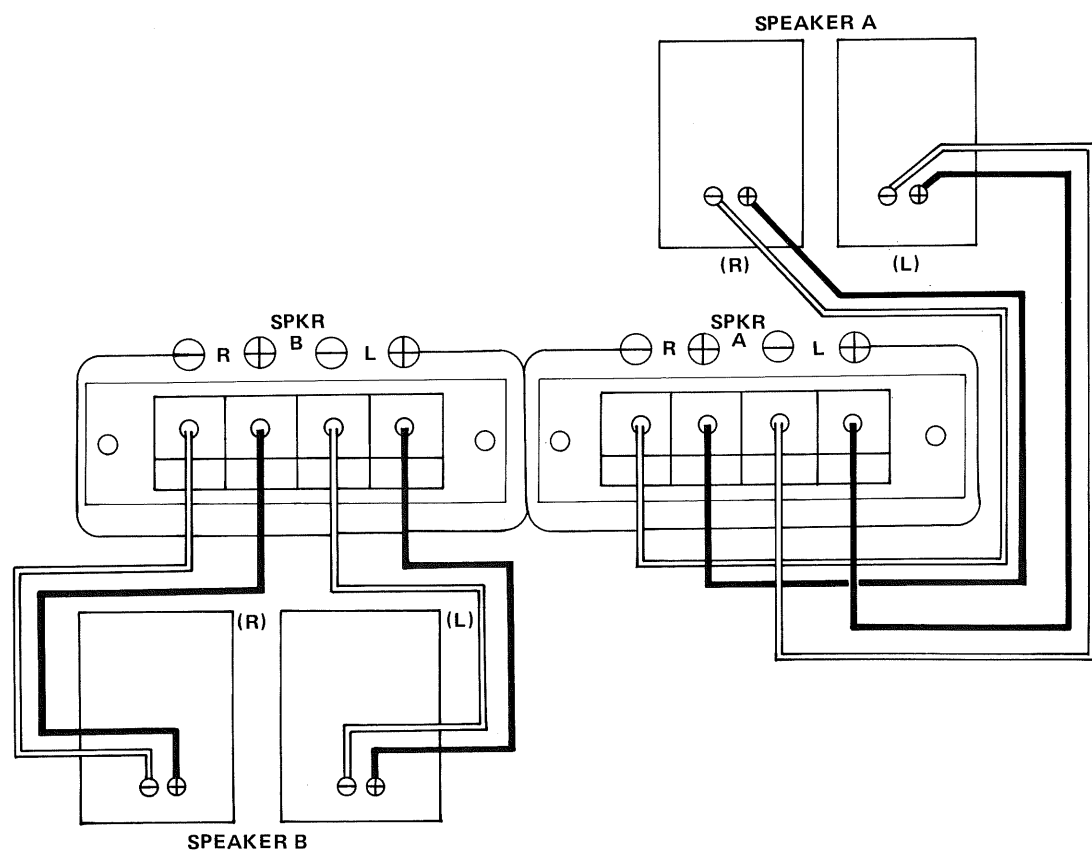

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

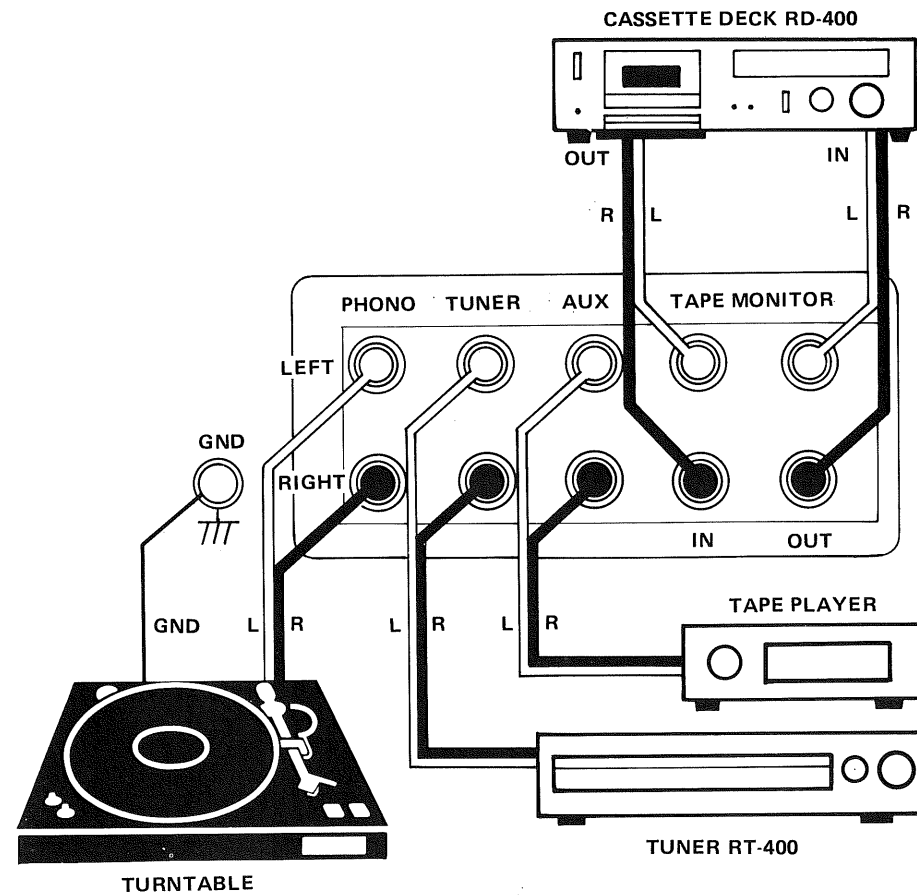

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

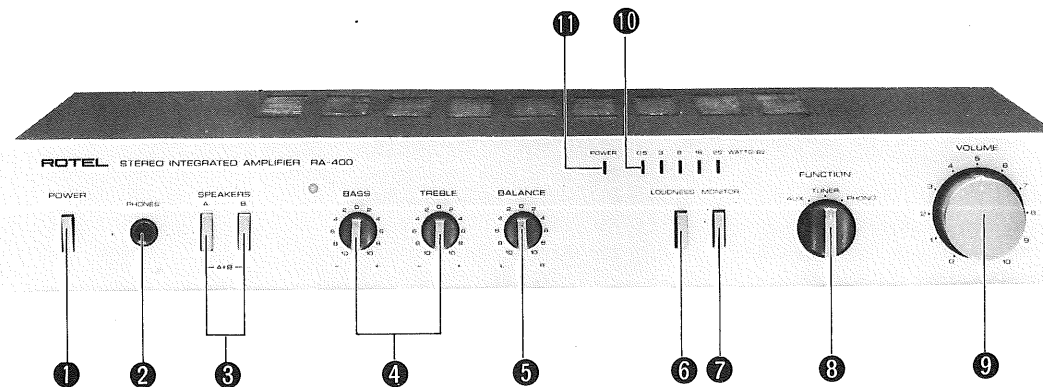

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

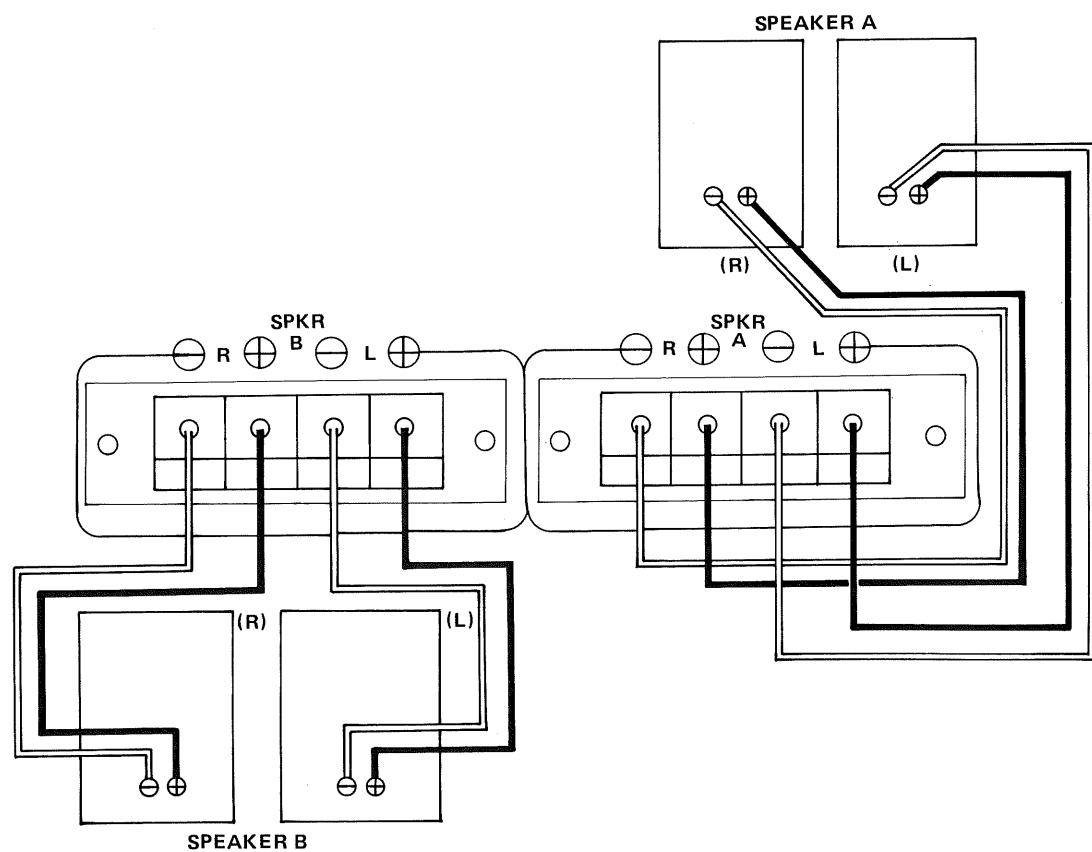

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

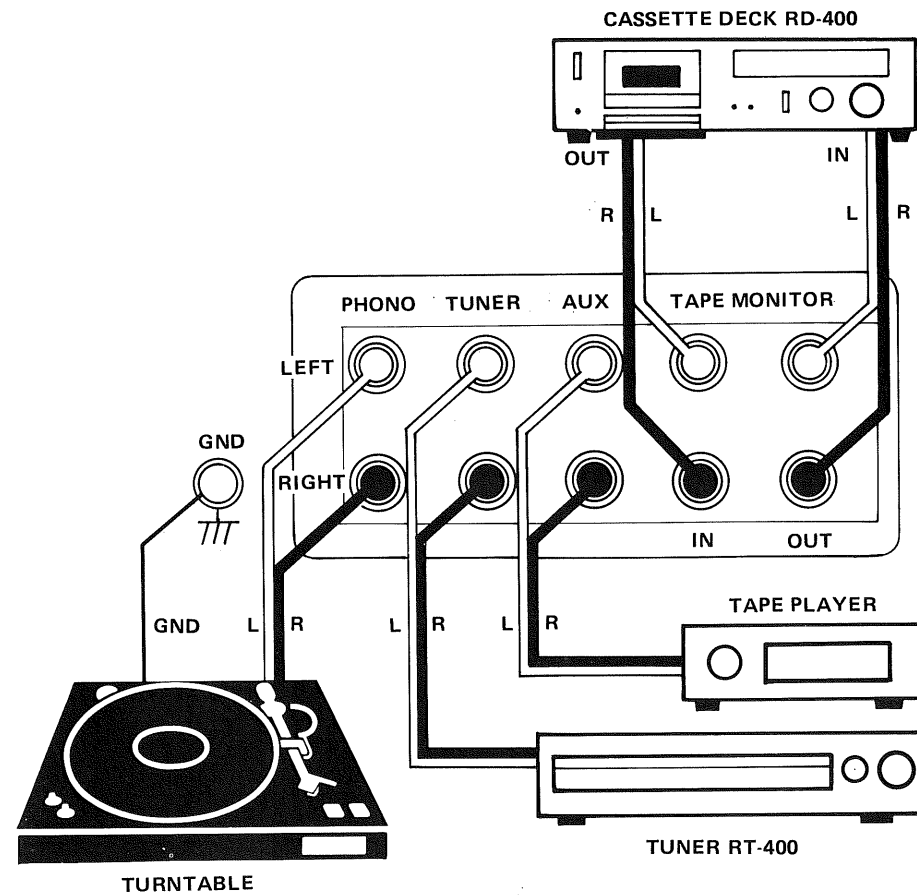

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

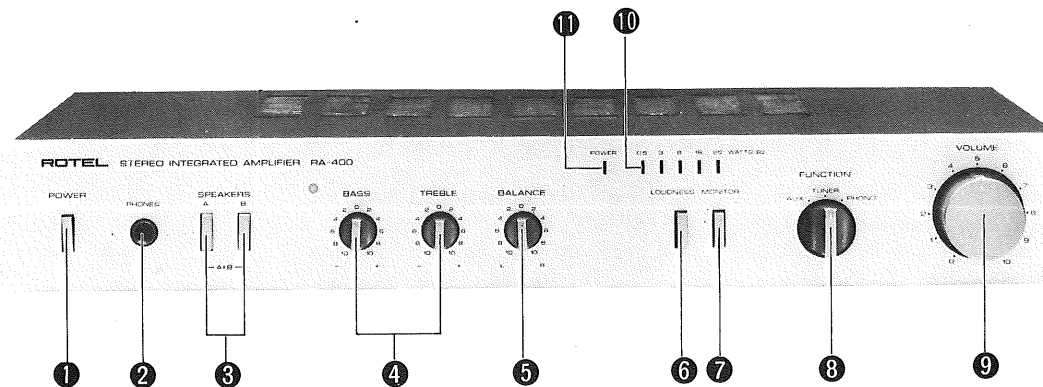

ENGLISH

STEREO INTEGRATED AMPLIFIER RA-400

INTRODUCTION

We at Rotel want to thank you for purchasing our audio product.

Rotel audio products are designed to use the latest electronic technology, and they incorporate our long experience as a specialist manufacturer of audio equipment. We are confident that you will find satisfaction in the high quality sound and top performance, and that you will find pleasure in the functional beauty achieved through human-engineering concept. Before starting operation, please read this instruction manual thoroughly and acquaint yourself with the proper mode of using the unit and all its connections.

We hope you will enjoy top-notch performance for many years to come.

BEFORE ENJOYMENT/ POWER SUPPLY

Follow the instructions below for maximum safety:

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 2-core cable without a plug, make certain live and neutral leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED.

1. Use a wall outlet for power supply

Be sure to connect the AC line cord directly to a household wall outlet, and not to an auxiliary outlet on another component. Be certain that the outlet voltage matches the electrical rating of the unit, found on the rear panel name plate.

2. Connecting and removing AC cord

Be sure to connect or disconnect the AC line cord only after turning off the power switch to prevent possible shock noise or damage to the speakers.

3. Power outlet on the rear panel

The rear panel of the unit is equipped with a power supply outlet designed exclusively for powering the tuner RT-400. Insert the square plug of the RT-400 into the power supply outlet. Never attempt to insert any other plugs into this outlet.

4. Installation

Be sure to place the unit on a level, flat surface in a place free from humidity, vibration, and high temperature and not exposed to direct sunlight. Make sure the location

placed is well ventilated.

5. Ventilate the unit well

Never block any ventilation holes at the top and bottom of the unit. Be sure also to provide ample ventilation space around the unit. Poor ventilation may result in damage due to excessive heat.

6. Do not open the cabinet

In order to avoid electric shock or damage to the component, never open the cabinet. If a foreign object falls inside the unit by mistake, turn the power off, disconnect the wall plug, and consult a qualified electrician or your dealer.

7. Turn the volume control initially to minimum.

When lowering the tonearm of your turntable onto a record, an excess of current in the lower frequency range may cause damage to the speakers. To prevent this, always minimize the volume setting initially.

8. Moving the unit

When transporting, remove the AC cord from the wall outlet and all other connected cords on the rear panel to prevent wire breakage and short circuits.

9. If the unit gets wet

If the unit should get wet, immediately disconnect the AC cord, and consult your dealer or a qualified electrician.

10. Cleaning and maintenance

 
Do not use chemicals such as benzine or thinners on the front panel. Always use a soft, dry cloth to clean the unit.

11. Retain the owner's manual

Retain the owner's manual near the unit, and write down the serial number (found on the rear panel) on the cover.


SPEAKERS

Be sure to use only speakers rated at 4 — 16 ohms. The unit will accept two pairs of speaker systems, but if the two systems are to be driven at a time, each speaker should be rated at 8 — 16 ohms. The speaker impedance may be found on its name plate or the instruction manual of the speaker.

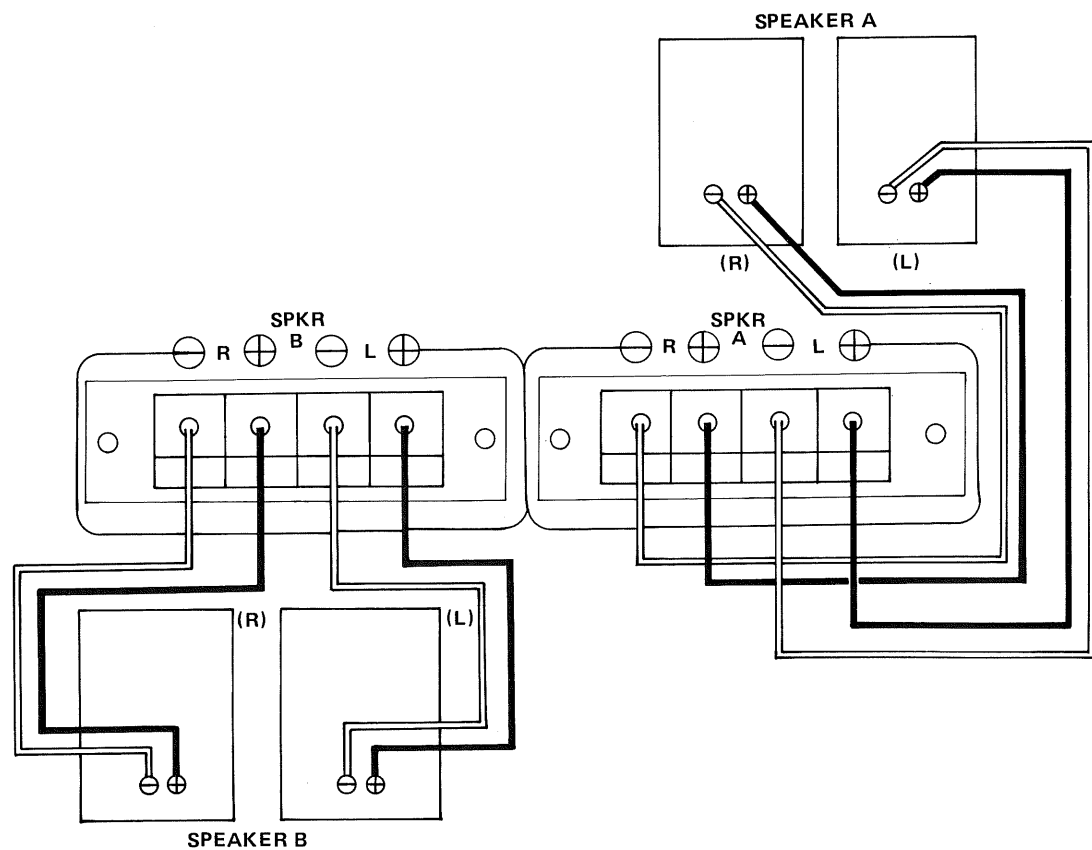

CONNECTING COMPONENTS

 Connect all necessary audio components to the rear panel of the unit, using RCA pin cords. See the illustration for properly completed connections. When connecting RCA pin cords, be sure that L (left) and R (right) markings on each component are matched correctly. Connect the grounding wire of the turntable to the terminal marked GND on the amplifier.

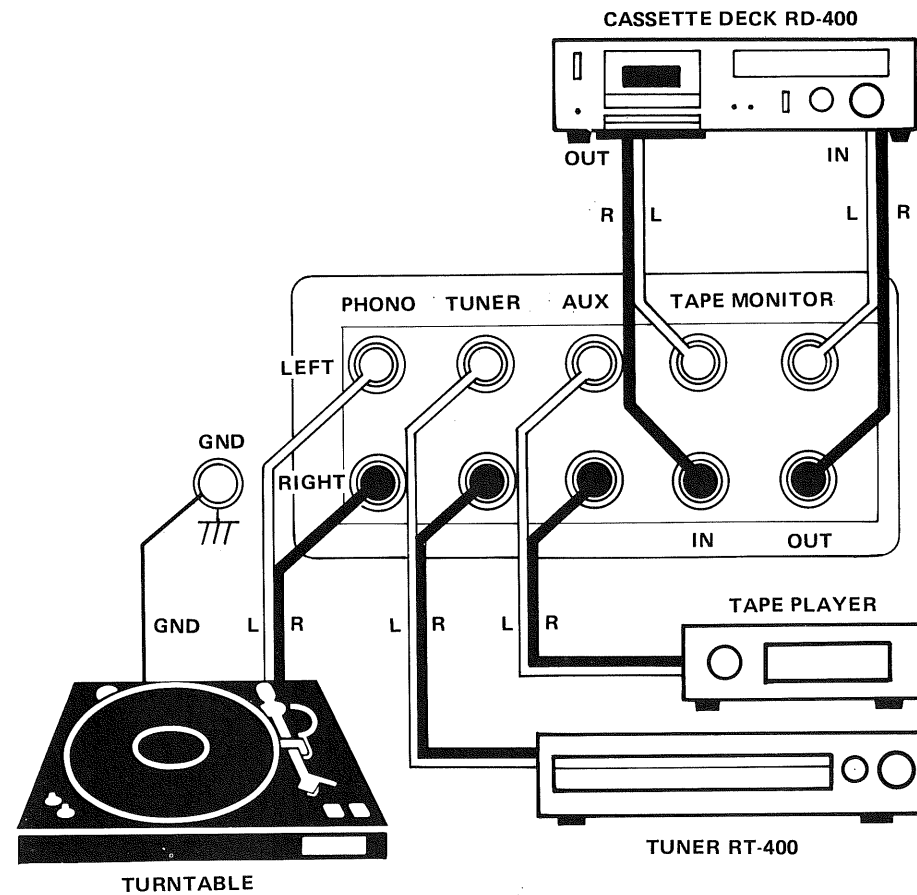

SWITCHES AND CONTROLS

(1) Power Button

Depress this button to turn on the power. Pressing the button a second time cuts the power.

(2) Headphone Jack

Plug your headphones into this jack for private listening. When using headphones, both A and B speaker buttons should be in released (OFF) position so that sound is emitted only from the headphones. Volume level of headphone sound can be controlled with the volume control.

(3) Speaker Buttons (A and B)

You can select the speaker system(s) you wish to use by means of two buttons. Depress button A to activate the speaker system connected to terminals A on the rear panel, and button B for the system connected to terminals B. Depressing both A and B buttons will activate both speaker systems.

(4) Tone Controls (BASS/TREBLE)

Two separate controls regulate bass and treble, respectively: BASS is for the low frequency range and TREBLE for the high frequency range. Rotate the knob clockwise to increase the response in each

case, and counterclockwise to decrease it. A flat response is obtained when both controls are set at mid-position. Effective use of controls gives optimum sound performance.

(5) Balance Control

In the central position, sound is produced in equal level from both speakers, while turning it to the right decreases the sound from the left speaker, and turning it to the left decreases the sound from the right speaker.

(6) Loudness Button

This button is used when listening at decreased volume levels, to help overcome the human ear's loss of sensitivity to low and high frequencies.

Using this button boosts bass and treble frequencies, to provide natural sound quality.

(7) Tape Monitor Button

Depress this button to listen to the signal from tape deck. When it is in released position, the source selected by the Function Selector (broadcast or record) will be heard.

(8) Function Selector

The Function Selector is used to listen to a source other than tape deck. Make sure the Tape Monitor button is set in released position when operating the Function Selector. Set the knob to TUNER to listen to broadcast, PHONO to use turntable, and AUX for equipment

connected to AUX terminal on the rear panel.

(9) Volume Control

 
Used to regulate the volume level. Rotate clockwise to raise the level, and counterclockwise to lower it.

(10) Output Level Indicator

The 5 LEDs directly show the changing power output level, from 0.5 to 25 watts.

(11) Power Indicator

Glowes when the power is turned on.

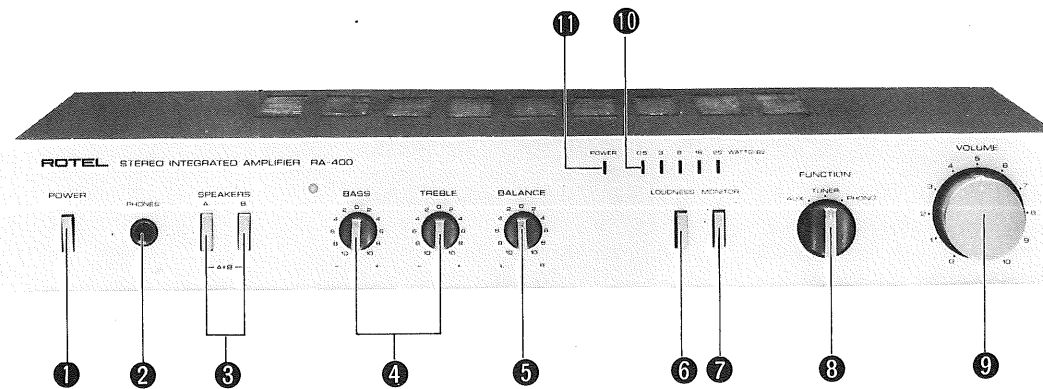

ty. Uncompromised.

 
ROTEL®

STEREO INTEGRATED AMPLIFIER

RA-400

owner's manual

BEDIENUNGSANLEITUNG
MANUEL DE L'UTILISATEUR
GEBRUIKSAANWIJZING
MANUAL DEL USUARIO
MANUALE DELLE ISTRUZIONI
BRUKSANVISNING

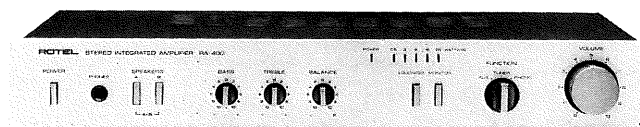

ENGLISH	2
DEUTSCH	5
FRANÇAIS	8
NEDERLANDS	11
ESPAÑOL	14
ITALIANO	17
SVENSKA	20

WARNING

TO PREVENT FIRE OR SHOCK HAZARD,
DO NOT EXPOSE THIS APPLIANCE TO
RAIN OR MOISTURE

Write your SERIAL NUMBER here.
The number is located near the name
plate on the rear panel.